

## ADAPTED CD/RADIO/CASSETTE PLAYER

### *To Play CD, MP3, USB/SD*

Insert a music CD (USB or SD card) and prepare unit for playing as per manufacturer's instructions.

Plug your switch into the socket labelled: **"CD Play"**.

Pressing your switch will control the Play/Pause function of the Player.



### *To Play Radio or Tape*

The switch will turn the radio/cassette power on and off. It cannot do things like change stations or rewind a tape.

Before plugging in the external switch the **Radio** must be turned on, tuned to a station and the volume adjusted, or alternatively the unit could be switched to **Tape**, put a tape into the player and press the play button. (The tape should be rewound to the start!)

Plug your switch into the socket labelled: **"Radio/Tape"**.

Select **Instant** - for press on, release off  
or **Latch** - for press on, press again off.

The CD/Radio/Cassette can be used with batteries or mains power.

These instructions should be read in addition to the operating instructions provided by the manufacturer of the CD/Radio/Cassette Player.

---

For further assistance or details of our wide range of SPECIAL SWITCHES and other electronic equipment for people with disabilities, please contact us at:

**109 Ferndale Rd. Silvan VIC 3160**

**Phone (03) 9737 9000 Fax (03) 97379111 [www.tecsol.com.au](http://www.tecsol.com.au)**