



Technical Solutions Australia PTY LTD
ABN 14 063 349 502
109 Ferndale Rd. Silvan VIC Australia 3795
PH (03) 9737 9000
Fax (03) 9737 9111
service@tecsol.com.au
www.tecsol.com.au

Information Sheet

Floor Mat Alarm - Pager Beep & Vibrate

Cat. No's: **FMA-PAGER
PRX-ALA-03**

This unit features a vinyl floor mat switch and a powerful pager transmitter receiver pair. **It will operate over distances of up to 300 Metres***. The small convenient **Pager Receiver** is portable and can fit in a pocket or clip onto your belt. The Pager Receiver beeps and vibrates to ensure the attention of the holder. Both the transmitter and receiver are battery powered for convenient portability. * *The range will be dependent on environmental factors.*



Set up:

- ◆ Fit 3 x AAA Alkaline Batteries in to the transmitter.
- ◆ Fit 1 x AA Alkaline Battery in to the receiver.
- ◆ Place the mat switch on the floor beside the bed.
- ◆ Cover the mat switch with a non-slip floor mat – this will both protect and disguise the mat.
- ◆ **(WARNING: AN UNCOVERED MAT SWITCH CAN BE A TRIPPING HAZZARD)**
- ◆ Plug the lead from the mat switch into the Transmitter and place the transmitter under the bed – out of harm's way.

- ◆ Press the BLUE 'call' button and check that the small RED light on the front of the transmitter flashes once.
- ◆ Also check that the pager (receiver) starts beeping and vibrating.
- ◆ Reset the Pager Receiver by pressing the reset button on the side of the unit.
- ◆ If using an external switch, plug it into the socket in the transmitter as shown above - check that the pager also operates when this switch is pressed.
- ◆ Take care of your mat switch. Do not fold, as this will destroy the switch. Store flat do not roll. Avoid placing sharp objects on mat switch.

Battery Life:

- ◆ The transmitter batteries may last up to a year. For reliable operation, fit new batteries every six months. The receiver battery may last from two to six weeks.
- ◆ The receiver has a '**Battery Indicator Light**'
 - ◆ Battery Good: Light flashes each 4 seconds
 - ◆ Battery Low: Light stays on as an indication that the battery is low.
- ◆ If the operation becomes unreliable, fit new batteries.
- ◆ Always use **NEW Alkaline** Batteries. Note that the receiver can also be used with 'AA' Rechargeable batteries – available from Technical Solutions.