

Information Sheet

SOS Emergency Telephone

Cat. Number: TA119

SOS Emergency Telephone

The SOS Emergency Telephone is more than a standard everyday telephone. It also performs a number of unique emergency alarm functions. When an alarm is activated, the phone automatically dials the first of three pre-programmed telephone numbers. If the call is not answered the second pre-programmed telephone number is dialed, followed by the third if the second is not answered. If the calls are not answered the phone will repeat this process three times. When the call is answered the prerecorded emergency message is played. Then the person can monitor the premises to ascertain the nature of the emergency.

Emergency/Security Features:

- Activate an emergency call by pressing the large red “EMERGENCY” button on the phone
- Remotely activate emergency call from up to 20 metres with remote pendant.
- Can interface door or window detectors, PIR detectors and smoke detectors.
- The functionality of a back to base alarm without the ongoing fees of monitoring.
- Send an emergency message, which you have prerecorded, to a set of three pre-programmed telephone numbers.
- Ability to listen to background noise at premises after alarm activation.

Telephone features:

- 10 Memory buttons.
- Redial – up to 24-digit number.
- Ringer volume adjustment.
- Speaker volume adjustment.
- Selectable ring tones (3).
- Recording function – used to record an emergency broadcast message to be played to predefined numbers.
- Play function – used to replay the recorded message.

SOS EMERGENCY TELEPHONE TA119



REMOTE ANSWERING PENDANT

SOS Emergency Telephone

Optional Fall Call Pendant

This special pendant is secured on the client's upper body in a vertical position, as shown right. Should the wearer have a fall, the pendant is tipped on its side and will trigger the SOS Phone alert.

A small on/off switch is used to disable the pendant when it is not in use so as to limit the chance of false alarms.

- Make sure not to turn the Fall Call Pendant on unless it is in the vertical position with the arrow up.
- Always turn the Fall Call Pendant off before fitting or removing it from the wearer.

