



Technical Solutions Australia Pty Ltd
ABN 14 063 349 502
109 Ferndale Rd. Silvan VIC Australia 3795
PH (03) 9737 9000
Fax (03) 9737 9111
service@tecsol.com.au
www.tecsol.com.au

STEP-BY-STEP (WITH LEVELS)

QUICK RECORD INSTRUCTIONS

1. Turn ON by moving the volume control to the right until you hear a click.
2. To enter into recording mode, press the Repeat/Rec/Level button twice quickly • • and release.
3. Press and hold the top surface while recording your message.
4. Release the top surface after each message.
5. To move on to the next level, press the Repeat/Rec/level button three times quickly • • • and release.
6. Repeat steps 3, 4 & 5 until you have recorded all your messages. You can record several messages on each level.
7. To exit the recording mode, press the Repeat/Rec/Level button twice quickly • • and release.
8. To change levels while playing back repeat step 5.

Please read the instructions supplied with the unit before you use it.

This is a quick reference guide only.

It doesn't include all of the features of the Step-by-Step.